

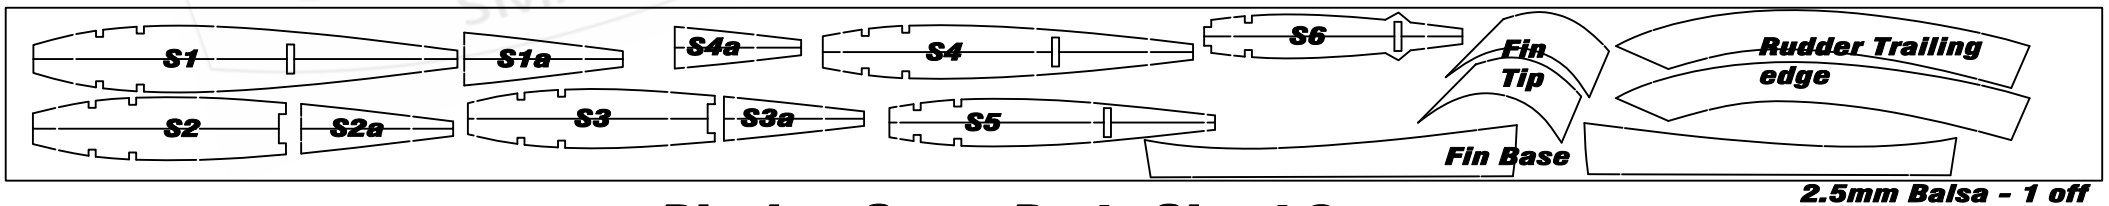
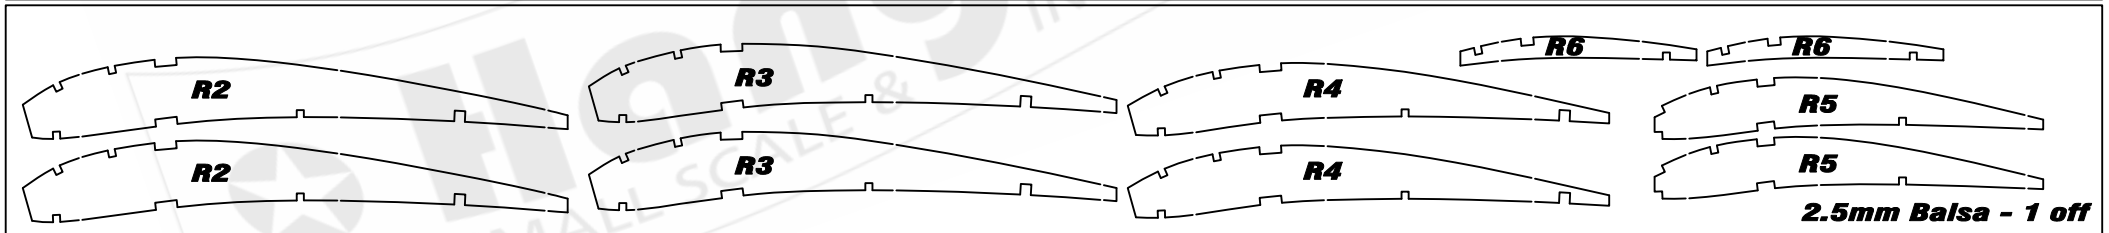
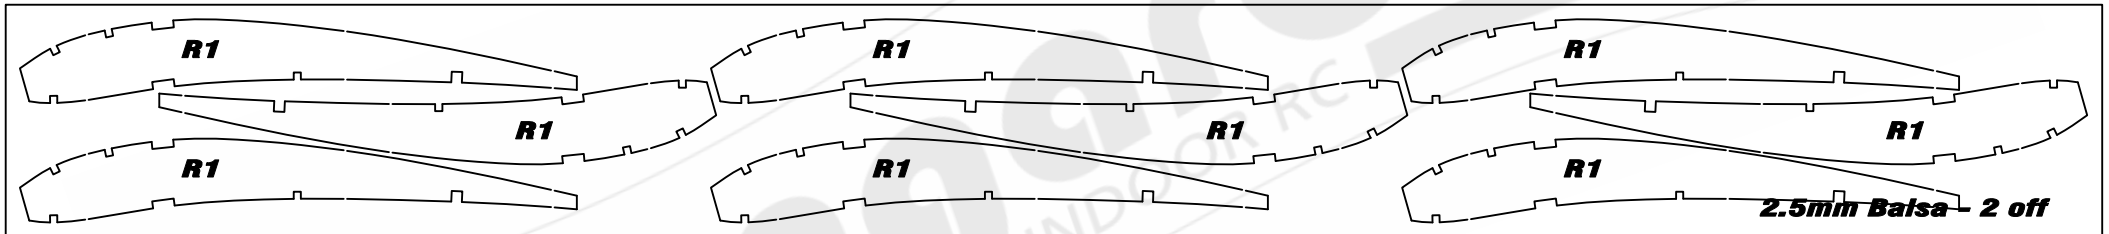
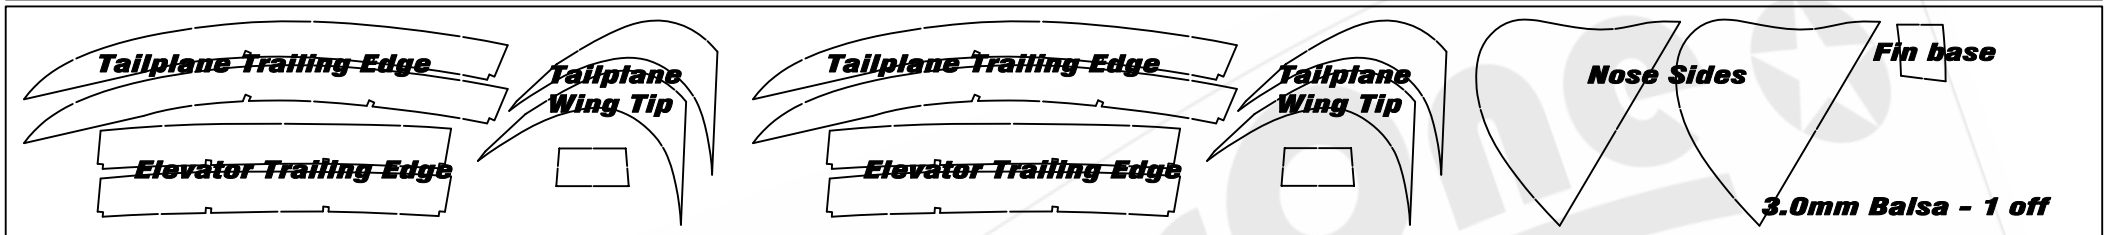


**Playboy Snr - Parts Sheet 1**

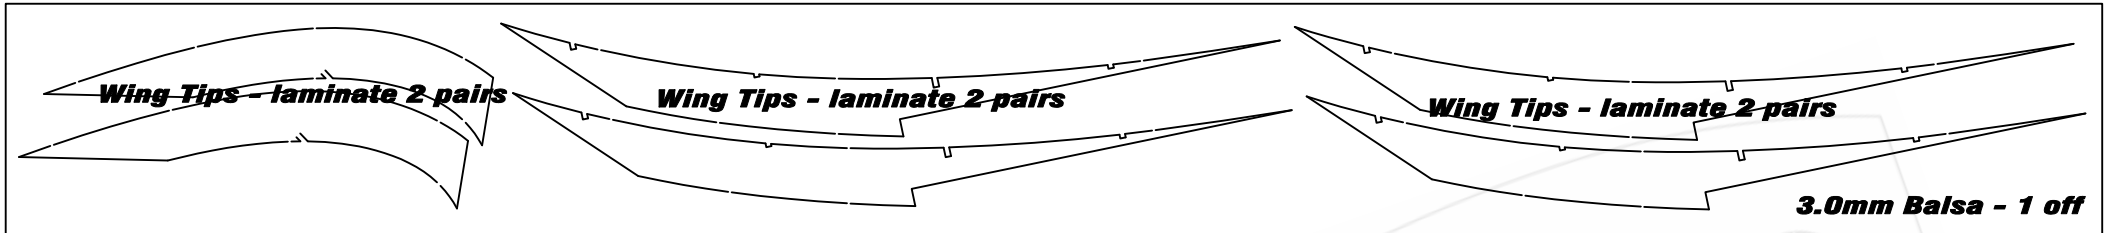


**Playboy Snr - Parts Sheet 2**

**Wing Trailing edge gussets**

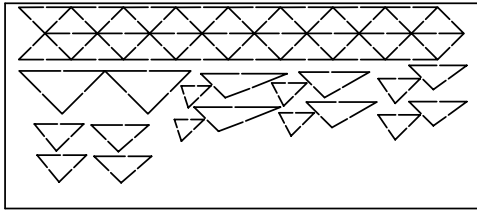


**2.5mm Balsa - 1 off**

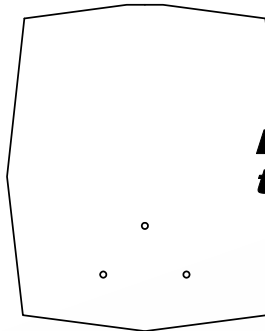


**1.5mm Hoop Ply - 1 off**


**Firewall, laminate together**

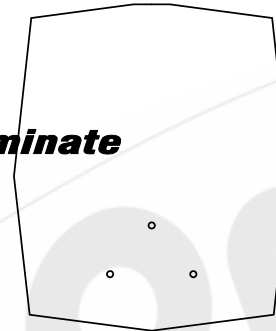

**3.0mm Hoop Ply - 1 off**

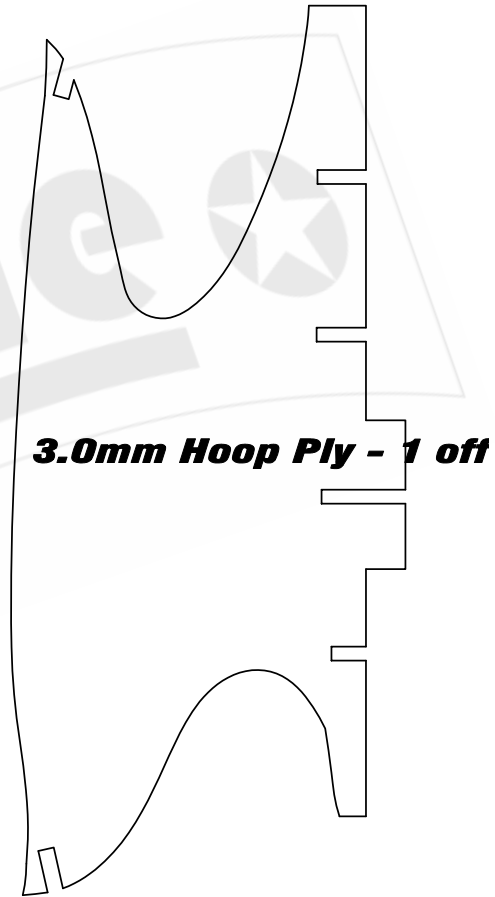

**3.0mm Hoop Ply - 1 off**

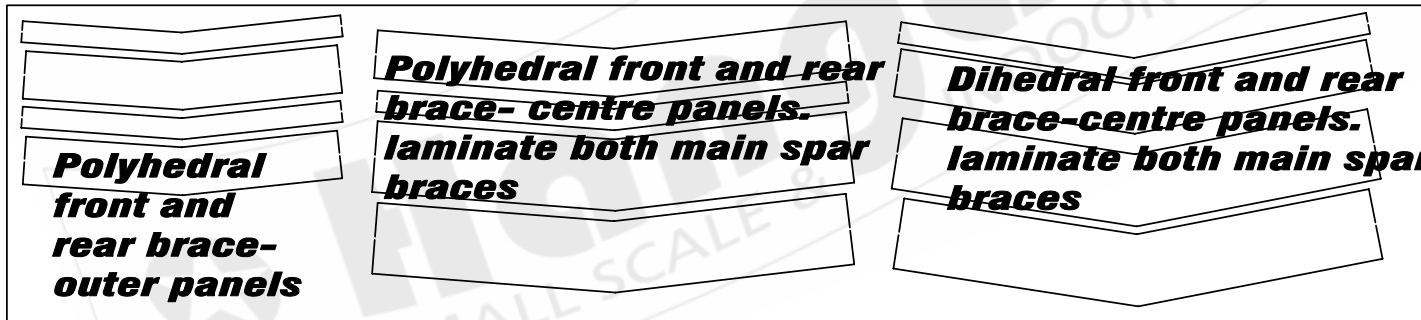

**Polyhedral front and rear brace-outer panels**

**Polyhedral front and rear brace-centre panels. laminate both main spar braces**

**Dihedral front and rear brace-centre panels. laminate both main spar braces**

**3.0mm Hoop Ply - 1 off**

**Playboy Snr - Parts Sheet 3 - Ply**